








IMPORTANT
Retain for Future Reference & Read Carefully

#### **Parts List**

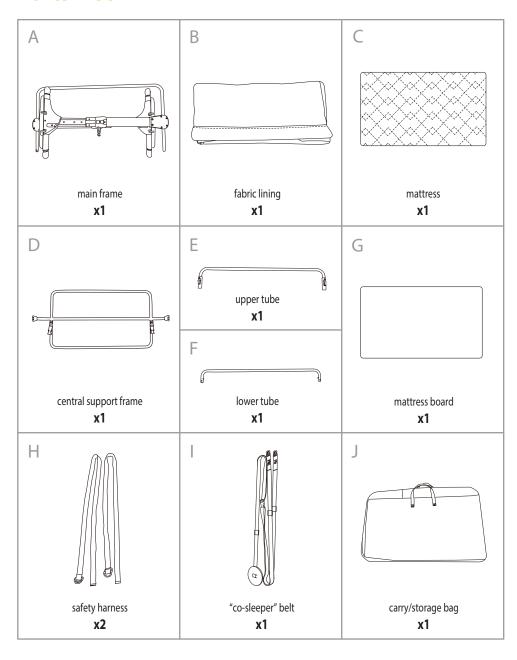

#### Care

#### Maintenance

Always check parts regularly for tightness of bolts, nuts and other fasteners - tighten or replace if required.

Check the strength of the fabric covers from time to time. Defective or worn parts must be replaced; as should componants which are broken, torn, defective or worn out.

Use only parts and accessories approved by the manufacturer.

#### Cleaning

Hand wash the mattress cover using mild soap or upholstery shampoo. Spot clean the crib lining using mild soap or upholstery shampoo. NEVER use bleach. Air dry in shade thoroughly before reuse and avoid direct heat and sunlight. DO NOT iron. DO NOT dry clean.

Check the resistance of the fabric and the stitching after cleaning.

Wipe the frame using warm water and a mild detergent. NEVER use bleach. Never clean any part of the crib with abrasive, ammonia based, bleach based or spirit type cleaners.

Ensure the product is fully dry before use or storage.

Always ensure the crib is stored in a dry place to prevent mold or mildew developing. Store away from any heat sources and not in the sun.

## Safety

- A prolonged exposure to the sun may cause changes of tones to the product's
- colour. After a prolonged exposure of the product to high temperatures, wait
- a few minutes prior to placing your child in it.

#### CO-SLEEPING MODE (FIXED TO BED)

- The side support of the crib should always be put close to the adult mattress
- and the mattress should always be aligned with the height of the side support
- for restraint of the crib.
- Furthermore, the crib should be firmly fixed to the structure of the adult bed
- or to the mattress support.

WARNING! Check to make sure that the crib in the "co-sleeping mode" does not interfere with the adult bed.

WARNING! Use the crib with the tube lowered, only in "co-sleeping mode" (fixed to bed).

WARNING! The height of the adult mattress should always be more than that of the side support for containment of the crib.


WARNING! In "co-sleeping mode" the 2 legs of the crib should always be adjusted to the same height.

WARNING! Before every use always check to make sure that there is no space between the adult mattress and the side of the crib. On a regular basis check the condition of the product and the presence of any possible damage. In the case of damage do not use it and keep it out of reach of children.


This product conforms to EN 1130-1:1996

## Assembly

1. Open out the main frame (A) as shown.

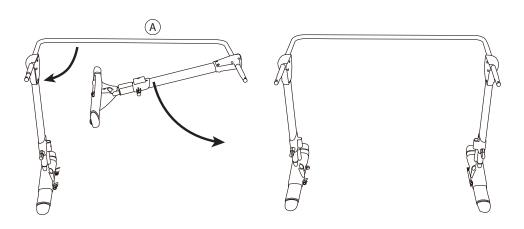


2. Attach the lower tube (F).

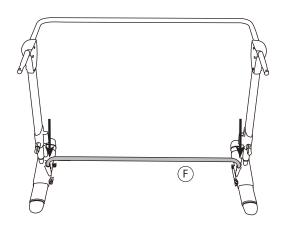


## **Assembly**

3. Insert the central support frame (D). A "click" will signal when secure.

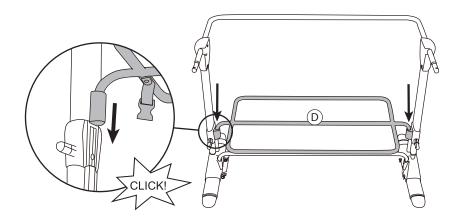

- 4a. Assemble the fabric lining (B) to the frame.
- 4b. Once in position zip around the frame to secure.

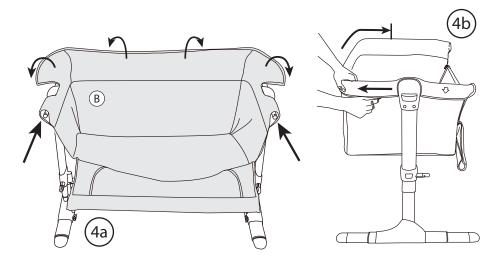

### Safety

WARNING! When the product is used in "co-sleeping mode" (fixed to bed), before laying the child in it, make sure that the connection belt is hooked and tensioned properly, the product must be secured to the adult mattress and no gaps between the product and the adult mattress must be present.

- The product must always be placed on a horizontal surface. Never leave the
- product on an inclinded surface with the child inside of it.
- Children must not be permitted to play without supervision near the product.
- Do not use the product without the frame.
- Keep the fastening belts away from the reach of children.
- Only use the mattress supplied by the manufacturer.
- The thickness of the mattress must be such that the vertical height (upper
- surface of the mattress until the upper edge of the product's sides) is at least
- 200mm.
- Do not use more than one mattress in the product.
- The reference mark on the product's interior indicates the maximum thickness
- of the mattress that shall be used.
- Do not leave any object inside the product that could reduce its depth.
- Do not position the product near walls and obstacles to prevent trapping
- · hazards.
- Do not leave small objects inside the product to prevent choking hazards.
- Use only spare parts approved by the manufacturer. Do not apply accessories
- to the product, which are not supplied by the manufacturer.
- Do not adjust the product with the child inside.
- Do not move the product with the child inside.
- Do not use the product for more than one child at a time.
- The product must be kept away from electric cables and cords: do not place
- the product near windows where cords, curtains or similar objects could pose
- $\bullet\,$  choking or strangling hazards for the child. To avoid strangling hazards, do
- not give to your child or place near her/him, objects equipped with cords.
- All assembly fittings should be tightened properly and care should be taken

- to ensure no screws are loose, as a child could trap parts of the body or
- clothing e.g. strings, necklaces, ribbons etc. which could pose a risk of
- strangulation.
- When not in use, keep the product away from the reach of children.

## Safety

# 

Read these instructions carefully before assembly and use and keep for future reference. The child may be hurt if you do not follow these instructions.

Before using, remove and dispose of any plastic bags and other packaging (e.g. fasteners, fixing ties, etc.) and keep them out of reach of children.

WARNING! This product is intended for use for babies aged between 0 and 6 months, weighing up to a maximum of 9 kg.

WARNING! When a child is able to sit, kneel or to pull itself up, the crib shall not be used anymore for this child.

WARNING! Do not use the product if any part is broken, torn or missing. WARNING! Be aware of the risk of open fires and other sources of strong heat, such as electric bar fires, gas fires etc.

- Before assembly, check that the product and all of its components have not
- been damaged during transportation. Should any part be damaged do not use
- and keep out of reach of children.
- Make sure the users of this product are knowledgeable on its proper operation.


WARNING! The product is ready for use only when all locking mechanisms are engaged. Check carefully that these are engaged before use.

WARNING! When the child is left unattended in the product, in "crib mode", always make sure that the side rail is raised and the zips are completely closed.

- All opening, adjusting, anchoring and positioning operations of the product
- must be carried out exclusively by an adult.
- Before use in "co-sleeping mode" (fixed to bed) make sure the product is
- properly anchored and positioned.


### Assembly

5. With the release catch facing downwards, thread the upper tube (E) through the fabric cover.

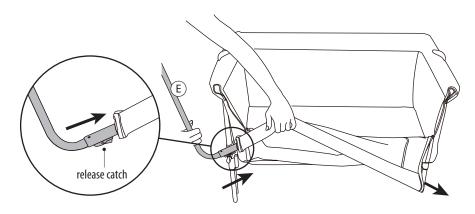

6a. Connect the upper tube to the main frame. A "click" will signal when secure.

6b. Fasten the zips at the side.

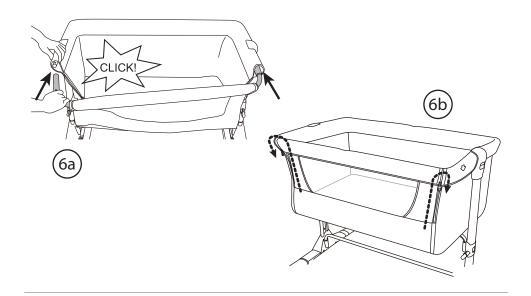


## Assembly


7a. Insert the mattress board (G) into the crib. Thread both safety harness (H) through the slots in the base and around the cribs main frame and mattress board.

7b. Fasten the harness as shown.

HINT. It is best to thread both safety harness first before tightening one side.

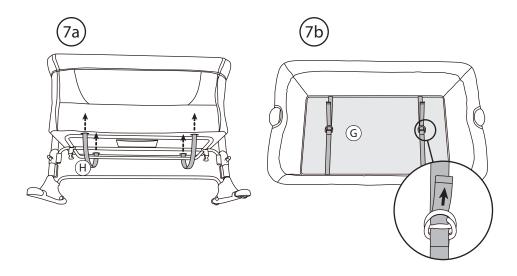


8. Insert the mattress (C).

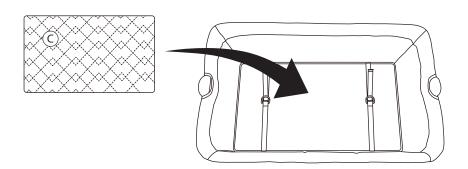

### Co-Sleeper (Fixed to Bed)

 
5. Pull on the loose ends of the belt to tighten it ensuring there is no gap between the adult bed and the crib.



6. Check the height of the crib against the adult mattress and adjust as required.

WARNING! The height of the adult mattress should always be more than that of the side support for containment of the crib.

WARNING! In "co-sleeping mode" the 2 legs of the crib should always be adjusted to the same height.

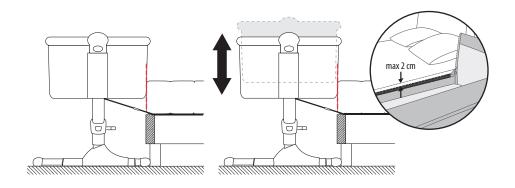


11

WARNING! Before every use always check to ensure that there is no space between the adult mattress and the side of the crib. If there is, pull the belt firmly to tighten until there's no space and the required condition of use has been restored.


WARNING! During use, ensure that the adult bed sheets, blankets etc. do not enter and cover the interior of the crib.

# Co-Sleeper (Fixed to Bed)

3. Connect the two buckles on the "co-sleeper" belt (I) to the crib underside as shown. A "click" will signal when secure.

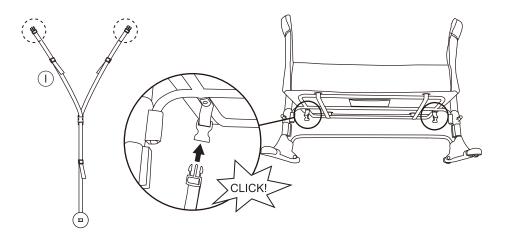

4. Align the crib beside the adult bed. Feed the "co-sleeper belt" underneath the adult mattress and hook the plastic disc between the adult mattress and base.

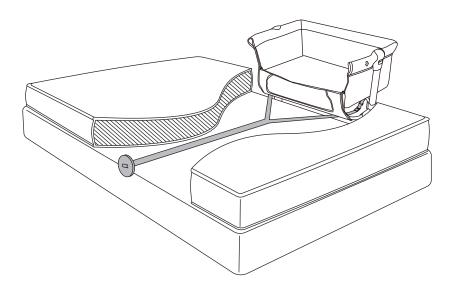

## Feet Adjustment

The feet can be lengthened or shortened dependent on the bed type. Adjust the feet to suit.


WARNING! Ensure the feet are fully lengthened when using as a standalone crib.



## Height Adjustment

The crib has four height positions.

1. Press in the release button either side and move crib up or down to desired height.

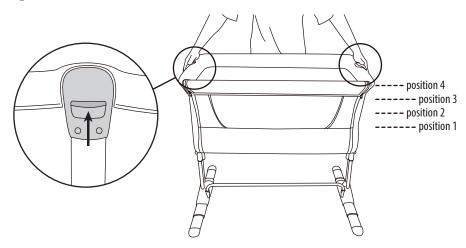


The base of the crib can be inclined slightly by adjusting frame sides to different heights.

2. The crib can be inclined with a max. variance of 1 position between one side and the other e.g. the left side in position 2 and the right side in position 3. WARNING! The head of the child should always be positioned on the highest side.



## Co-Sleeper (Fixed to Bed)

1. Open the side of the crib using the zips and open them completely.

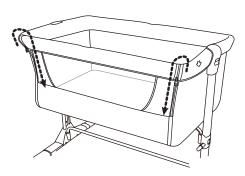

2a. Press the release button on the side of the upper tube. Remove partially on one side and then on the other side.

2b. Once released on both sides, lower the upper tube and connect it to the legs of the frame.

WARNING! If the child is left alone in the crib, always make sure that the drop side is raised.

